

## TR-series

	TR 2000-12	TR 2000-21	TR 3000-12	TR 3000-21	TR 3000-22
Ingangsspanning <i>Input Voltage</i>	110-120VAC	220-240VAC	110-120VAC	220-240VAC	220-240VAC
Uitgangsspanning <i>Output voltage</i>	220-240VAC	110-120VAC	220-240VAC	110-120VAC	220-240VAC
Frequentie <i>Frequency</i>	50 / 60Hz *				
Max. belasting <i>Max. load</i>	2000Watt		3000Watt		
Zekering automaat ingang <i>Circuit breaker input</i>	20Amp	10Amp	25Amp	16Amp	16Amp.
Galvanisch gescheiden <i>Galvanic isolated</i>	Ja Yes				
Transformator <i>Transformer</i>	Ringkern trafo <i>Toroidal transformer</i>				
Soft Start <i>Soft Start</i>	Ja Yes				
Koeling <i>Cooling</i>	Convectie Convection				
Temperatuurbeveiliging <i>Temperature protection</i>	Ja Yes				
Materiaal behuizing <i>Housing material</i>	Staal Steel				
Beschermingsgraad <i>Level of protection</i>	IP 66				
Afmetingen (lxbxh in cm) <i>Dimentions (lwxh cm)</i>	43x30x22				
Gewicht (kg) <i>Weight (kg)</i>	29,5		33		

\* = Deze trafokasten zijn geen Herz omvormers. Controleer of de apparatuur op zowel 50 als 60Hz kan werken.

\* = these transformers are no Herz converters. Check if the devices work on both 50 and 60Hz.

---